

SPRING LOCATION

PLAN VIEW H1, H2 & H3



-SPRINGS ARE LOCATED ON INTAKE AND DISCHARGE ENDS ON RAM 33/36



RAM-9 THRU 230 HANGER ISOLATOR
SIZE & LOCATION ARRANGEMENT H1 THRU H6

SPRING LOCATION

PLAN VIEW H4, H5 & H6