



LEGEND

- AC AUTOMATIC CUTOFF
- MC MANUAL CUTOFF
- P.D.N. AIR FLOW SWITCH
- DS DISCONNECT SWITCH
- CONTACTOR COIL
- HEATING ELEMENT
- TR TRANSFORMER
- CONTACT NORMALLY OPEN
- FUSE

WARNING:
Disconnect all supplies before working on this duct heater

IMPORTANT:
Wire in according with electrical codes
Use copper wire for 90°C minimum

NOTE:
All wiring outside this frame are wiring by others