



- LEGEND**
- AC
 - AUTOMATIC CUTOUT
 - MC
 - MANUAL CUTOUT
 - PDN
 - AIR FLOW SWITCH
 - DS
 - DISCONNECT SWITCH
 - CONTACTOR COIL
 - HEATING ELEMENT
 - TR
 - TRANSFORMER
 - CONTACT NORMALLY OPEN
 - FUSE

WARNING:
Disconnect all supplies before working on this duct heater

IMPORTANT:
Wire in according with electrical codes
Use copper wire for 90°C minimum

NOTE:
All wiring outside this frame are wiring by others